PrintMaster 700 Series Quick Setup Instructions







PrintMaster 700 Series Setup Menu Reference

LCD Control Panel Display Function View

The LC Display details all the important printer settings and which functions are currently assigned to which keys. Example below:

The upper line indicates that the printer is either in **Online** or **Offline** mode.

- The example below displays the printer's status as in the **Online** mode.
- The selected paper path is Trac 1
- The function is <u>Tear</u> indicating that key function is currently active in manual mode.
- Once changes have been made and saved, press <u>Online</u> to return to the main menu.

Select **Setup** to access Online MENU (Primary) and to change printer configurations.

Control Panel

There are three levels to make Configuration changes through the PM700 control panel:

Setup Primary Menu Sub-Menu

1. Press Setup to access any of the Primary Menus:

- 2. Example: Select Form to access Sub-Menus
- 3. Select <u>Next</u> until you see the **Sub-Menu** where you will make change settings.
- Make your changes in the Sub-Menu. Then save the changes by pressing <u>Set</u>. When you have made your changes, press <u>Setup.</u>

Char

Copyright © 2016 Printek, LLC A **DASCOM**Company 1517 Townline Road Benton Harbor, MI 49022

Printer Configuration Settings		
NAME Font	Form 1 HS-Draft	s
CPI LPI Skip	10 CPI 6 LPI 0.0Inch	
ESCChar Emulate Bidir	ESC Epson LQ-2550 On	
CharSet Country	Extended E-US ASCII	
Auto-CR Auto-LF	On Off Toor 10	
Width LeftMrg RightMrg	13.6lnch 0/10" 136/10"	
Barcode Barmode Single	Off Unsecured	
Formlen FormAdj FrontFrm	Letter 11" 12/72"	
Formlen FormAdj RearFrm	Letter 11" 12/72" *	
Formlen FormAdj PullFrm	Letter 11" 12/72"	
Formlen FormAdj	Letter 11" 12/72"	
Interf. Buffer CX-bid Form	Shared 256 KB On 1	
TearAdj FrontFrm TearAdj RearFrm TearAdj PullFrm	0/72" 0/72" 0/72"	
Quitm Pap.back APW	Off Normal Off	
Sound FFmode Wrap	On Off On	
PLM Widthcon Pagewid	On Off 80/10"	
Physlm Hvy Form GrSpeed	0/10" Off High	
Jobcntl Eject UltraDr.	Off Top Off	

Printer Path Flow: Sub Menu Chart

Phone: 800-368-4636 Fax: 269-925-8539 info@printek.com www.printek.com