

Printek, LLC.

Interceptor 800 Bluetooth Connectivity:

[Setting the correct port configurations for the CP210x UBS to UART Bridge]




INTERCEPTOR 800 BLUETOOTH CONNECTIVITY


Bluetooth interfaces vary between manufacturers; this is the basic procedure for connecting the printer to a Windows Bluetooth interface:

Be sure the Wireless interface is turned on the printer. The Wireless LED should blink when the BT connection is active.

1. Open the Devices and Printers folder.
2. Select Add a device.

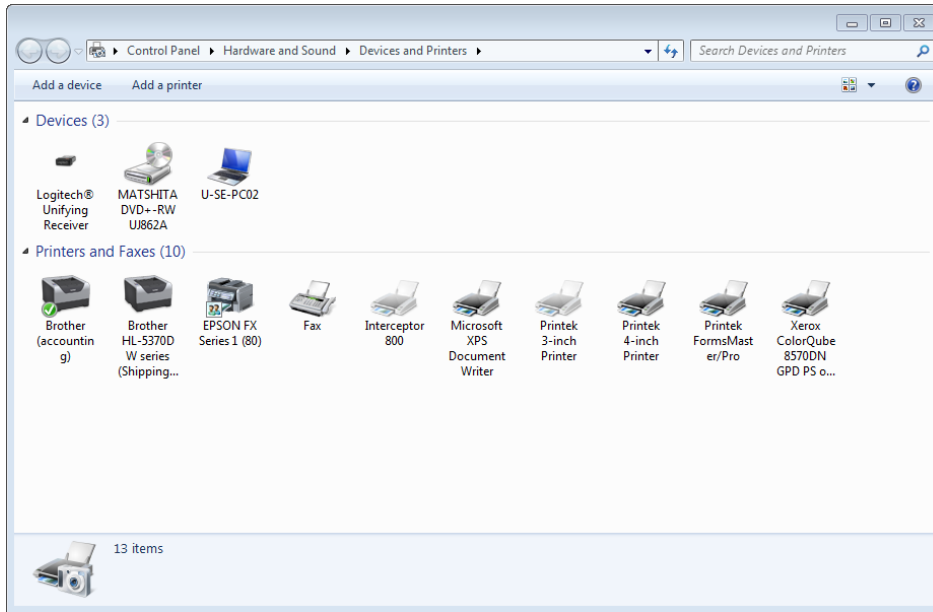


3. The PC will search for Bluetooth enabled devices.
4. The printer will be displayed as "IN-XXXxxxx". XXXxxxxx is the serial number of the printer.
5. Select the printer from the list.
6. Select Next.

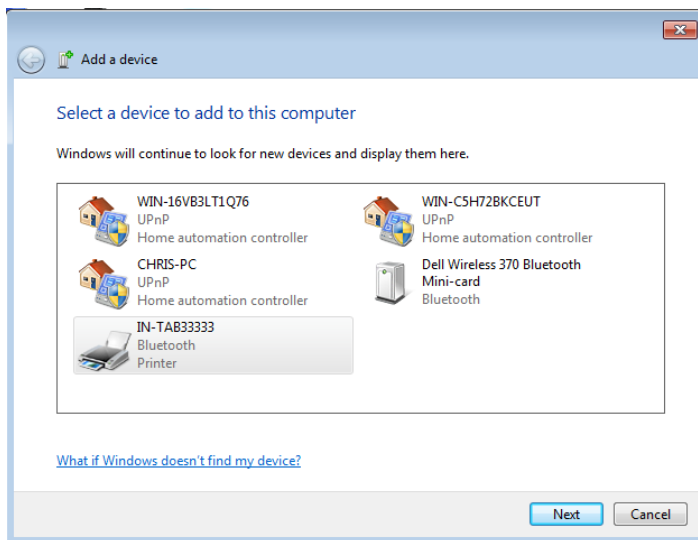


7. If prompted for a Passkey, the default passkey is 123456.

INTERCEPTOR 800 BLUETOOTH CONNECTIVITY

- Once paired the printer will appear in the Printers and Faxes list.

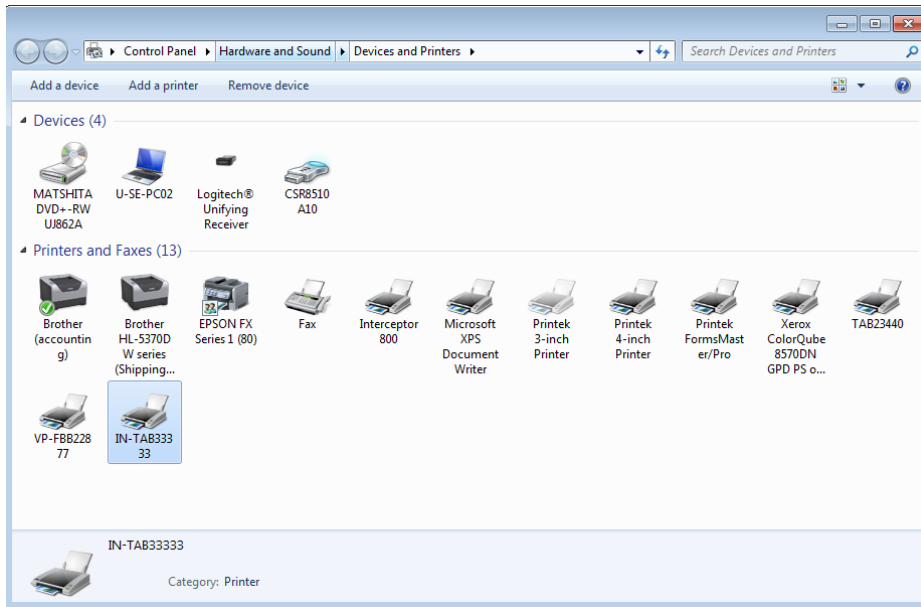

- Right click on the printer icon.
- Select Properties.
- Select Hardware tab.
- The COM port assigned the printer will be listed. This is the COM you will assign to the printer driver.
- Select OK to close the window.

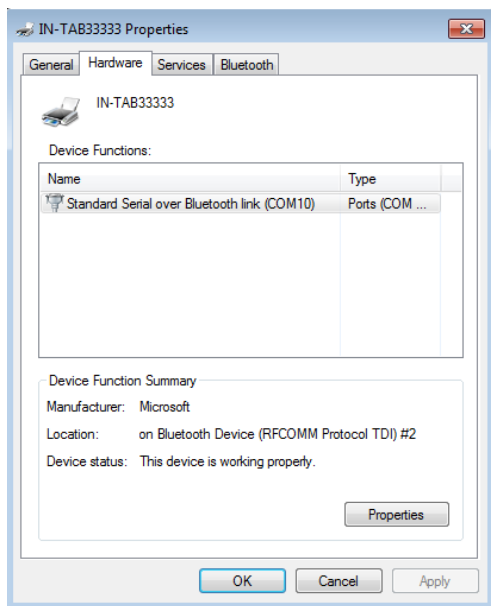

- This will return you to the Devices and Printers folder.
- Right click on the Interceptor icon.
- Select Printer Properties.
- Select the Ports tab.

INTERCEPTOR 800 BLUETOOTH CONNECTIVITY

18. Check the COM port that was assigned to the printer.
 - a. If you do not see the COM port listed, restart your PC.
19. Select OK.
20. Select the General tab.
21. Select Print Test Page.
22. Your printer should print the Windows test page.

