
VehiclePro 420

Quick Start Guide


This guide provides information on the daily use of the VehiclePro 420 printer. For additional information, please refer to the VehiclePro 420 Operator's Manual.

BEFORE you begin, please visit <u>www.printek.com</u> Support; Downloads; Drivers and Software, to download the VP420 printer driver.

Printer Features

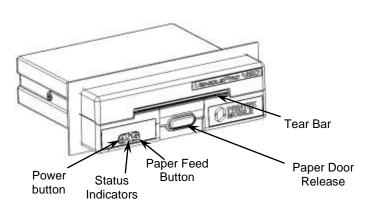


Loading Paper

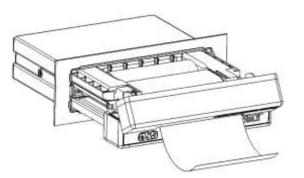

Push paper door release, pull out drawer, drop in paper roll and route through door as shown.

Printouts can be torn off in either direction.

Status Indications – Patterns & Meanings

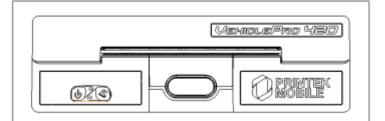

| 0 | | Printer is Off. |
|---|-------|--|
| 0 | Green | Printer is On. |
| * | Green | Printer is receiving data and/or printing, or is in Setup mode. |
| × | RED | Paper out, Paper Door is open, or printer is in set up mode. |

◯= Off **○** = On -☆- = Flashing

Printer Self-Test and Configuration Printout

To print configuration page and conduct printer self-test, with power on, double click the paper feed button.



Drivers, User Manuals, and Software Utilities available @ www.printek.com

VehiclePro 420


Installation

Cable Installation

Printek provides a single 9-pin D-connector that plugs into the back of the VP420 printer. This connection provides for both data communication and power to the printer. The cable has a USB-A connection to plug into the host. The cable has two unterminated power wires coming out of the connector. The positive cable is marked with red.

The Red labeled wire in the power cable may be connected to a 9-32 VDC source and the Black wire is to be connected to vehicle ground. The printer's power input should be connected to a fused circuit that is capable of providing at least 5A.

If not using a Printek cable, the printer connections are defined in the following table.

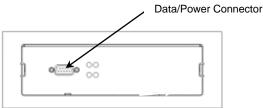

Data/Power Connector Pin Assignments

| Pin | Description |
|-----|------------------|
| 1 | USB Ground |
| 2 | D- |
| 3 | D+ |
| 4 | USB +5V |
| 5 | Power Ground |
| 6 | USB Shield* |
| 7 | NC |
| 8 | Power (9-32 VDC) |
| 9 | NC |


*Note: Do not use USB Shield as power ground.

The printer MUST be grounded to the vehicle chassis via the 8-32 stud on the back.

Interface Settings

| Bluetooth® (Optional) | WiFi (Optional) |
|-----------------------------|-----------------|
| Pairing Mode: Paired | DHCP |
| Security: Off | Static |
| Role Policy: Defer | Access Point |
| Discoverability: On | |
| Local Name: VP-SerialNumber | |
| Pin: 0000 | |

Printer Installation

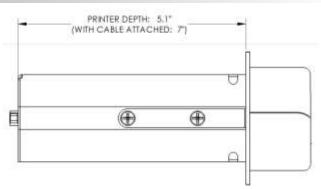

To complete the installation, secure the data/power cable connector to the back of the printer, insert the printer into the dash/console.

| Vehicle Console Manufacturer* | Mounting Plate Purchase Number |
|---------------------------------|--------------------------------|
| Havis, Inc. | 93757 |
| Lund Industries | 93758 |
| Gamber-Johnson | 93759 |
| D&R Electronics | 93760 |
| Precision Mounting Technologies | 93761 |
| Troy Products | 93762 |
| Jotto Desk | 93763 |

*Console slot depth must meet or exceed 7 inches.

