


FieldPro 541

Quick Start Guide


This guide provides information on the daily use of the FP-541 printer.
For additional information, please refer to the FP-541 User Guide.

BEFORE you begin, please visit www.printek.com Mobile Printers; Service and Support; Drivers and Software, to download the FP540 printer driver.

Printer features

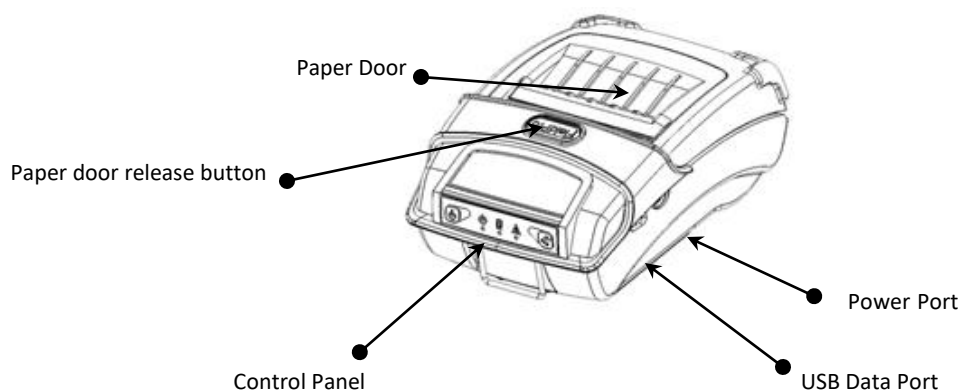

Media

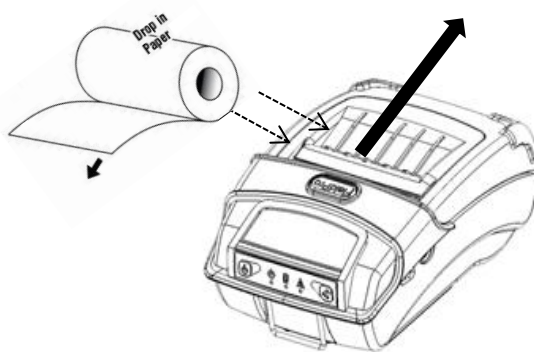


Tear paper towards back of printer

NOTE:
When using 3" paper, install spacer
P/N: 93194

Press Paper door release button to open the paper compartment door. Pull small leader of paper out and close paper door. "Clicks" when properly closed.

Battery

Press button to see battery charge level.
4LED 100% charge
3LED 75%
2LED 50%
1LED 25%

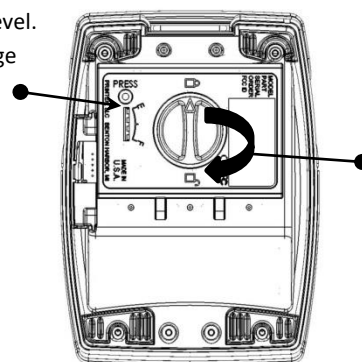

Loosen hand strap (not pictured) to access battery door.

Rotate knob 180° to unlock battery door.

Drop in battery.

Close battery door and rotate knob 180° to lock.

Battery Disposal



Only dispose of used batteries according to your local regulations. If you do not know your local regulations, the Rechargeable Battery Recycling Corporation (RBRC) is a non-profit organization created to promote recycling of rechargeable batteries. For more information visit www.call2recycle.org

FP-541 Quick Start Guide

Control Panel indicators



Power & Status (Green/Red)	Battery (Yellow)	Alert (Red)	Indication
On	Off	On	Booting up
On	Off	Off	Ready
On	Off	Flashing	Paper Error/Lid Open
Flashing	Off	Off	Job is arriving
Flashing	Off	Off	Job is printing
Flashing	Off	Flashing	IP over USB active
Solid, Flashes Off Every 2 Seconds	Off	Off	Wireless Personal Area Network active
	Solid		Charging Battery
	Flashing		Battery Low

	Function:	How to:
Power Button 	Power up Power down Toggle IP over USB on/off	Press & Release Press & Hold Press Twice
Paper feed button 	Advance paper Print setup report	Press once Press twice

Self-Test / Configuration print out



With power on, press the paper feed button twice quickly.

USB Access to Printer Web Pages

1. Turn the printer ON.
2. Connect a USB cable between the printer and a PC.
3. To access the FP-541 web page, push the Power button twice rapidly. This will put the printer into Configuration mode.
4. When the printer is in Configuration mode the POWER and FAULT LEDs will flash together.
 - a. Open browser on your PC and type 169.254.200.1 into the address bar of the browser and hit Enter - A login box should appear:
 - b. Type "0000" and hit Enter- you should now be at the home page for FP-541 Configuration.
5. To return the printer to normal operating mode, double click the POWER button. The Power LED will be returned to a solid light.



Once the printer is connected via USB and in *IP over USB* mode it is temporarily not possible to access the Internet.