

# MLP-35

## Quick Start Guide


This guide provides information on the daily use of the MLP-35 printer.

For additional information, please refer to the MLP-35 User Guide @ [www.printek.com](http://www.printek.com).


**BEFORE you begin, please visit [www.printek.com](http://www.printek.com) Support; Downloads; Drivers and Software, to download the MLP-35 printer driver.**

### Printer features


FRONT VIEW

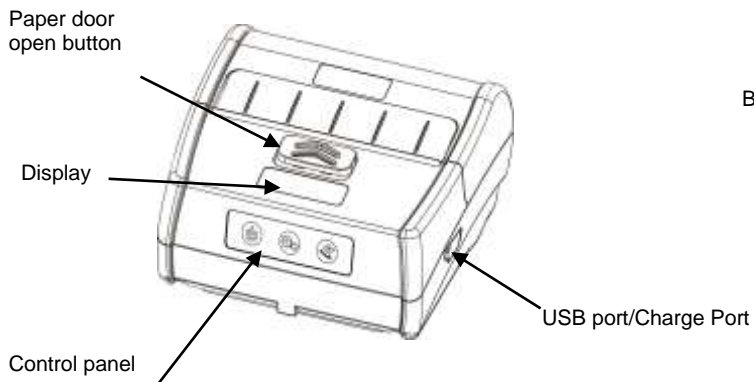

REAR VIEW

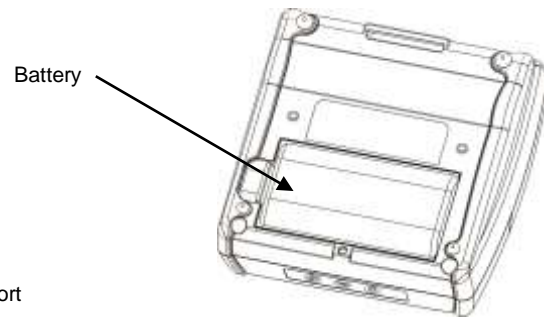

### Media

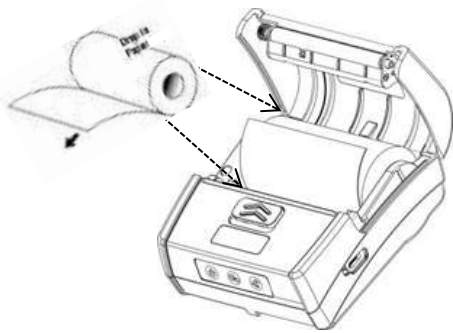


Slide paper door release button in direction of arrows to open the paper compartment door. Pull small leader of paper out and close paper door. "Clicks" when properly closed.

### Battery

To remove battery for replacement, depress battery door clip and pull out battery.

Battery levels on OLED display:  
Empty <5%  
Level 1 15-40%  
Level 2 40-70%  
Level 3 70-100%

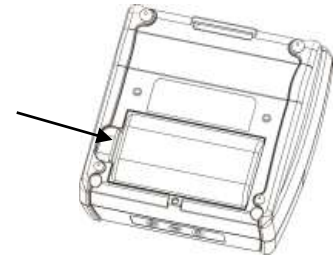

### Battery Disposal



Only dispose of used batteries according to your local regulations. If you do not know your local regulations, the Rechargeable Battery Recycling Corporation (RBRC) is a non-profit organization created to promote recycling of rechargeable batteries. For more information visit [www.call2recycle.org](http://www.call2recycle.org)



# MLP-35 Quick Start Guide

## Control Panel indicators



	Function:	How to:
Power Button 	Power up Power down	Press & Release Press & Hold
Paper feed button 	Advance paper  Print setup report	Press  Press and hold for 3 seconds

## OLED Display

Status	Display	Buzzer
Buffer has data.	Working	N/A
Buffer is empty.	Print Ready	N/A
Cover opens	Head Up	Buzz/2s
Paper run out	Paper Out	Buzz/2s
Abnormal label positioning	Calibrate Error	N/A
No label gap detected	Out Tear Error	N/A
Print head overheats	Head Hot	N/A
Energy saving mode	Zzz...	N/A
FW download mode	Upgrade mode	N/A
FW is being downloaded	Fw Upgrade...	N/A
Finish the FW downloading	Upgrade OK	Buzz once
Battery is low	BAT Low	N/A

## Self-Test / Configuration printout



With the power on, press and hold the PAPER FEED button for 3 seconds.

## Printer Configuration

The Printek Configuration Tool is a Windows based software program that can be downloaded from our web site. This program can be used to configure the printer's settings. You can also use the display and Settings, Power and Paper Feed buttons to configure the printer.

### To access the Control Panel Menu:

Push the Printer Settings button to enter the Configuration Menu.

Push the paper Feed button to select the menu section.

Push the Printer Settings button to enter the section.

Push the Printer Settings button to select parameter under the menu section.

Push the Paper Feed button to change the setting.

Push the Power button to go back one menu selection.

Menu Parameters:

System Setup – Print Speed, Energy Mode, Print Density, Emulation, Recharge mode, Code Page

Paper Setup – Print Type, Top, Left Margin

Device Config – Sensor Type

Bluetooth Setup – BT Name, PIN Code

