



## ACCESSING THE WEB BASED CONFIGURATION PAGE IN THE PRINTEK MOBILE PRINTER USING WINDOWS 11:

### Setting the printer into config mode:

1. Turn the printer on by pushing the POWER (green) button.
2. The printer will perform a self-test. The printer will beep and the red LED will turn off when the self-test is complete and no problems are found.
3. Plug the printer into a USB port on your PC using a standard USB-A to USB-B mini or USB-C cable. (Depending on the model Printek printer you have.)
4. Push the POWER (green) button twice rapidly to set the printer into configuration mode.
  - a. The green and red LEDs will flash when the printer is in SETUP mode.

### Checking for the RNDIS driver:

1. Refer to "Setting the printer into config mode" above.
2. Open the Settings folder.
3. Select Bluetooth & devices.
4. Select Devices.
5. Plug the printer's USB cable into your PC.
6. Look to see if the printer is displayed as a USB Serial Device (COM#), *Figure 1*, or as an RNDIS Ethernet Gadget, *Figure 2*.

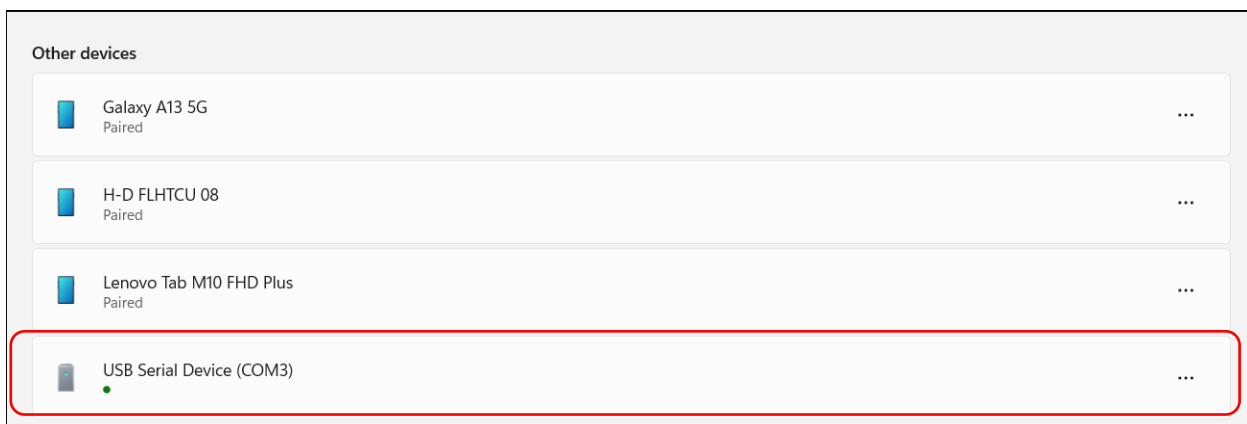


Figure 1 - USB Serial Device

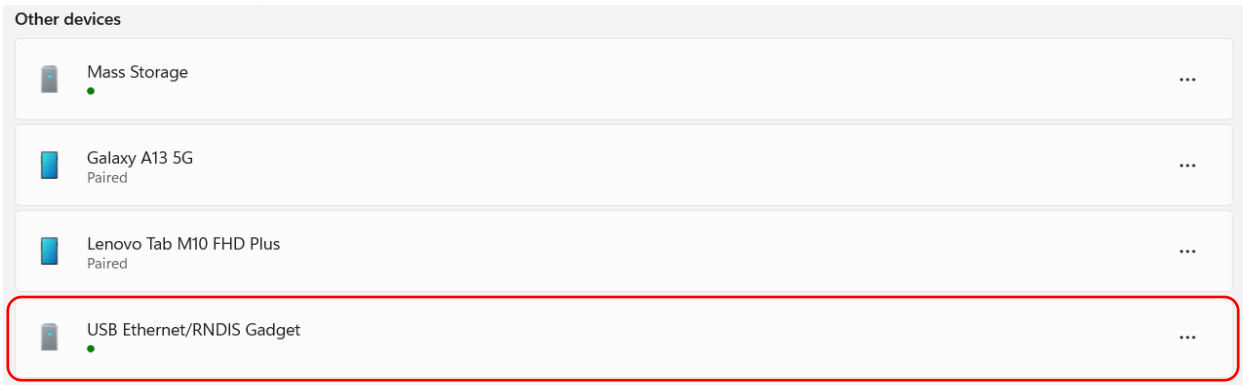


Figure 2 - RNDIS Ethernet Gadget

7. If the device is listed as the USB Serial Device (COM#), *Figure 1*, you will need to download and install the RNDIS driver from our web site: <https://www.printek.com/windows-desktop>.
  - a. The driver is the last one on the list.
  - b. File name, RNDIS\_Install\_DASCOM.zip.
  - c. After downloading, extract the files.
  - d. Run the Install.exe file.
  - e. This will change the USB Serial Device to USB Ethernet/RNDIS Gadget.

### Connecting to the printer:

1. Turn the printer on by pushing the POWER (green) button.
2. The printer will perform a self-test. The printer will beep and the red LED will turn off when the self-test is complete and no problems are found.
3. Plug the printer into a USB port on your PC using a standard USB-A to USB-B mini or USB-C cable. (Depending on the model Printek printer you have.)
4. Push the POWER (green) button twice rapidly to set the printer into configuration mode. a. The green and red LEDs will flash when the printer is in SETUP mode.
5. Open a web browser.
6. In the address bar of the web browser type the I.P. address 169.254.200.1
7. Push the ENTER key or select GO in the browser.
8. You should see the Configuration Interface login page, *Figure 3*.

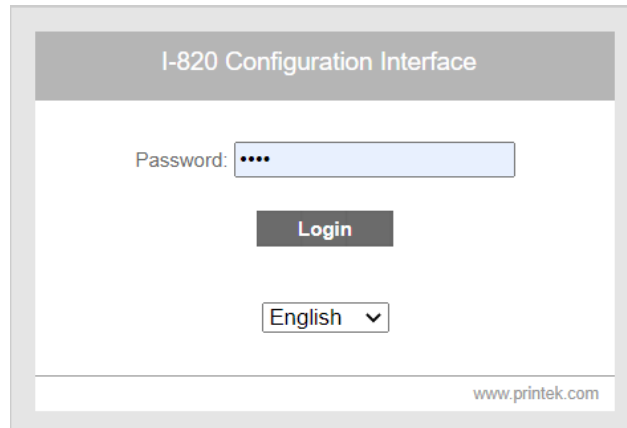


Figure 3 - Login

9. Default Password is 0000(four zeros).
10. Select Login.
11. This will take you to the Main configuration page, Figure 4.

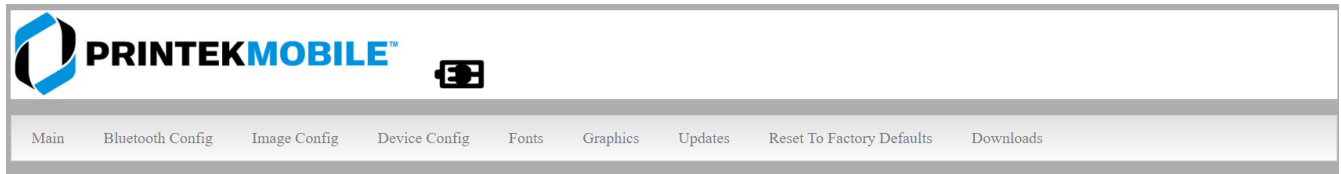


Figure 4 - Main Configuration Page

12. Select the menu item you want to change.
13. The menu selections are the same as the printer's configuration page.
14. After making any changes be sure to click on the Submit button to save any changes.
15. Once you have made changes close the web browser.
16. Push the POWER button on the printer twice rapidly to put the printer back to normal mode.